



Internal Use Only

<http://biz.lgservice.com>

AHU COMMUNICATION KIT SVC MANUAL(Exploded View)



MODEL : PRDCA0

CAUTION

Before Servicing the unit, read the safety precautions in General SVC manual.
Only for authorized service personnel.

Exploded View and Replacement Parts List

Model : PRDCA0

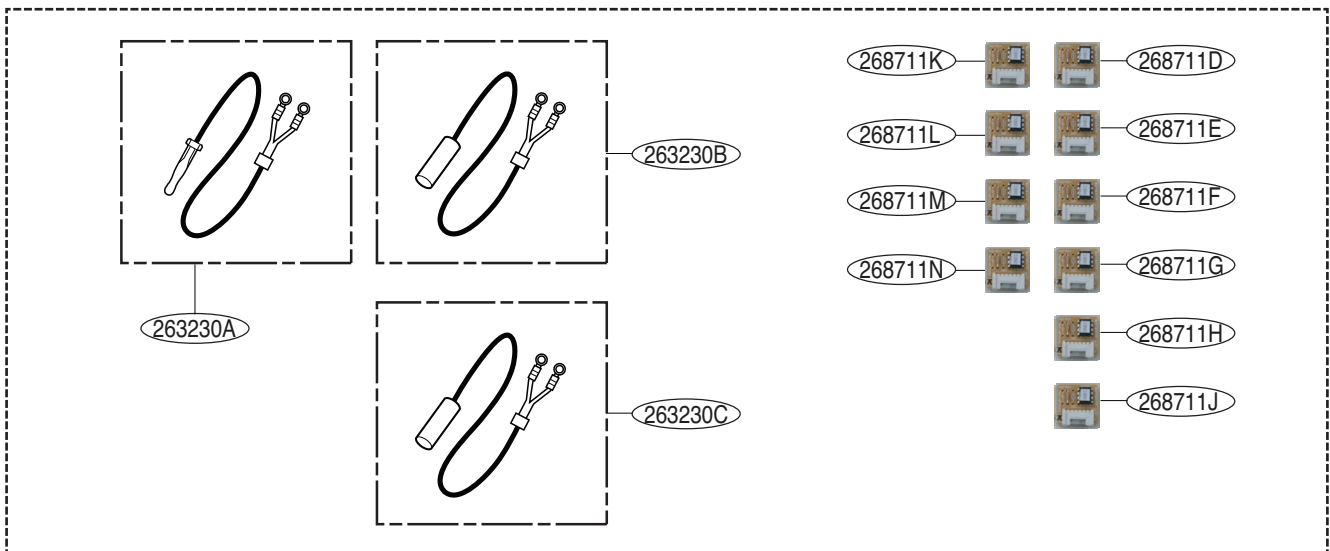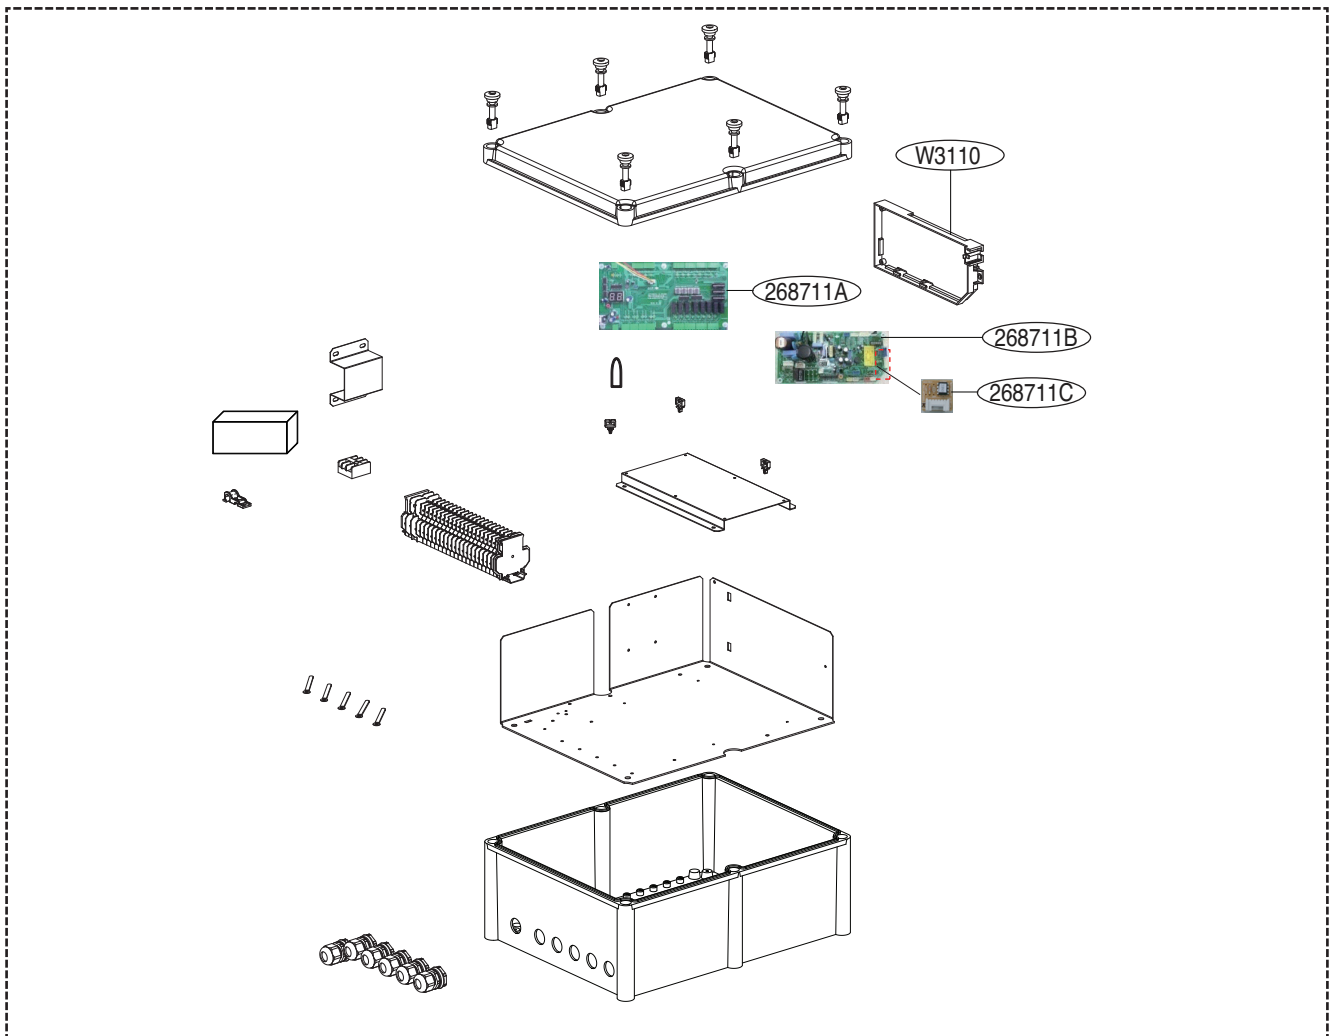

Exploded View and Replacement Parts List

Model : PRDCA0

LOCATION NO	DESCRIPTION	PART NO	Q'TY
268711A	PCB Assembly, Main	EBR61967304	1
268711B	PCB Assembly, Main	EBR66367414	1
268711C	PCB Assembly, Option(198k)	EBR52358913	1
268711D	PCB Assembly, Option(96k)	EBR52358912	1
268711E	PCB Assembly, Option(76k)	EBR52358911	1
268711F	PCB Assembly, Option(48k)	EBR52358910	1
268711G	PCB Assembly, Option(42k)	EBR52358909	1
268711H	PCB Assembly, Option(36k)	EBR52358908	1
268711J	PCB Assembly, Option(28k)	EBR52358907	1
268711K	PCB Assembly, Option(115K)	EBR52358914	1
268711L	PCB Assembly, Option(134K)	EBR52358915	1
268711M	PCB Assembly, Option(153K)	EBR52358916	1
268711N	PCB Assembly, Option(172K)	EBR52358917	1
263230A	Thermistor Assembly (Room)	EBG61106821	1
263230B	Thermistor Assembly (Pipe_In)	EBG61287703	1
263230C	Thermistor Assembly (Pipe_Out)	EBG61287704	1
W3110	Case	3110A20145A	1



P/NO : MFL67103105

JUNE, 2014