



Internal Use Only

<http://biz.lgservice.com>

# AHU CONTROL KIT

## SVC MANUAL(Exploded View)

**MODELS : PRCKD21E  
PRCKD41E**

### **CAUTION**

Before Servicing the unit, read the safety precautions in General SVC manual.  
Only for authorized service personnel.



# Exploded View and Replacement Parts List

---

MODELS : PRCKD21E / PRCKD41E

LOCATION NO	DESCROPTION	PART NO	Q'TY
268711A	PCB Assembly,Main	6871A90053H	1
268711B	PCB Assembly,Main	6871A90053F	2 (4)
267110	Remote Controller Assembly	AKB32790416	1
W0FZZ	Fuse,Non Time Delay	EAF61591801	1
W6920	Relay,Contact	EBB61361701	1
W3110A	Case	3110A20145A	2 (4)
W3110B	Case	3110A20013B	1

( ): PRCKD41E



P/NO : MFL67103108

MAY, 2014